

 
# Adding a License to a Thinknx Server

- **Step 1** Copy the license code received upon your purchase.



Step 1: License code

- **Step 2** Log in to your server by inputting ip\_address:5051 into your web browser.




Step 2: Server Webpage

- **Step 3** Enter your login credentials (default username: service, default password: password).




Step 3: Server Login

- **Step 4** Go to Server -> Licenses and Codes.

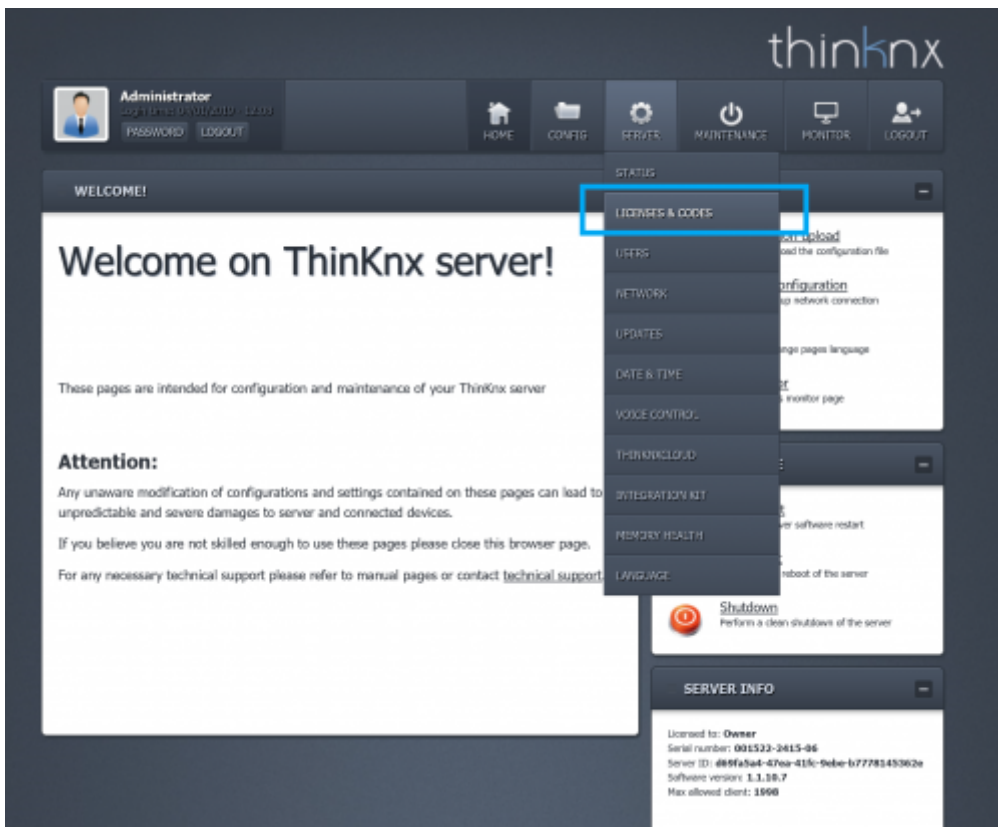


Step 4: Licenses and Codes

- **Step 5** Paste the copied license in the text field under “Licenses”.

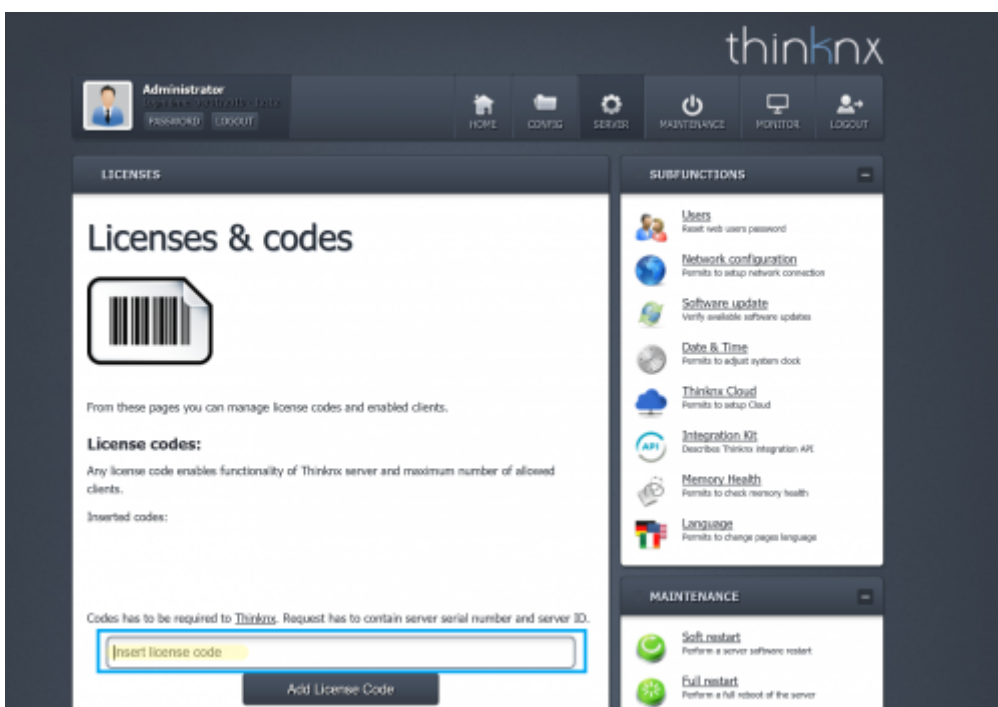


Step 5: Pasting the Code

- **Step 6** Click on Add License button.

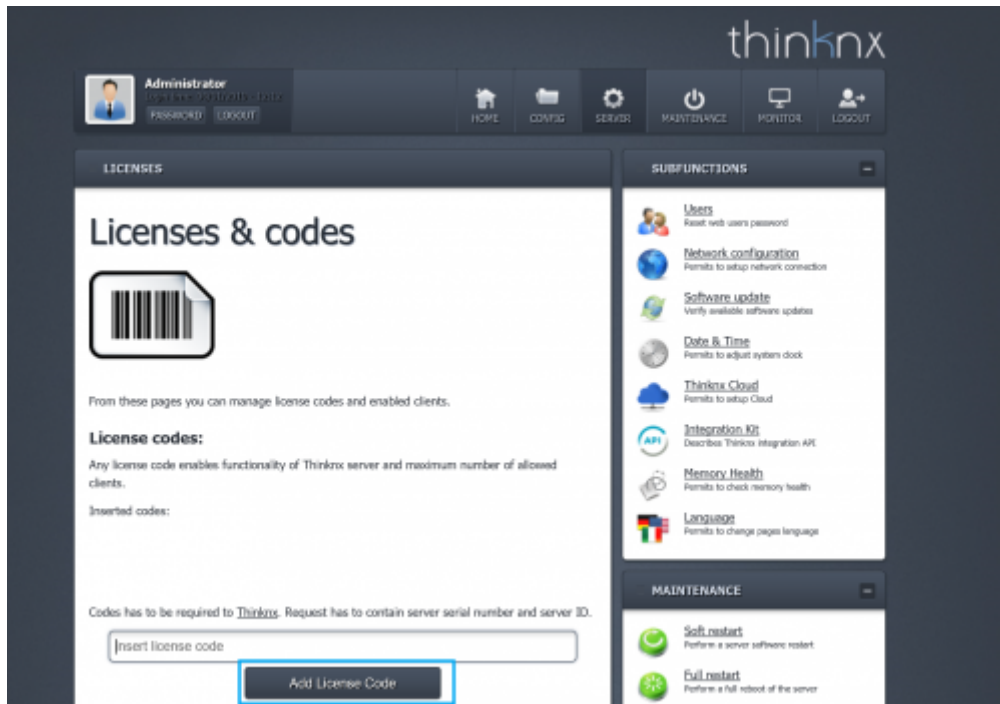

Step 6: Adding the Code

- **Step 7** To make sure the license is activated, go to Server -> Status.

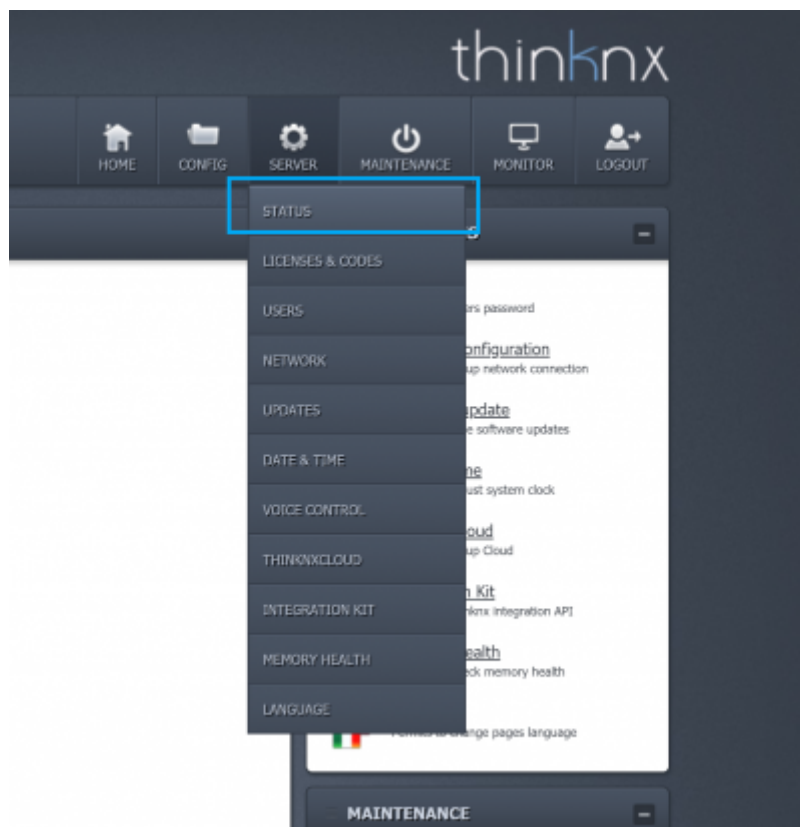

Step 7: Status Page

- **Step 8** Check under “Enabled Licenses” if your newly added license is now activated.

- Enabled licenses:
  - KNX**
  - Security appliances**
  - Intercom**
  - Modbus Gateway**
  - Reports & Charts Engine**
  - Infrared Gateway**
  - Automation**
  - Multimedia**
  - Sonos Manager**
  - Serial Gateway**
  - Ethernet Gateway**
  - Lutron Gateway**
  - Sip PBX**
  - Hue Gateway**
  - BTicino MYHome Gateway**
  - Z-Wave Gateway**
  - Voice Control**
  - Integration Kit API**

Step 8: Enabled Licenses

From:  
<http://www.thinknx.com/wiki/> - **Learning Thinknx**

Permanent link:  
<http://www.thinknx.com/wiki/doku.php?id=licensing>

Last update: **2019/04/01 13:36**

